



GRO20P0W SPARE PARTS LIST

No.	Part Name	Part#	QTY
1	Range back support	G20C01-212600	2
2	Rear connecting plate	G20C01-022000	2
3	Cooktop fixed support	G24G02-026100	2
4*5	Backsplash assembly	G20G02-011500-01Assm	1
6	Cook top	G20G02-020100-01Z	1
7	Pan support	G20B02-021400	1
8	Cooktop burner (long)	G24G02-040200	2
9	Spark plug support	G24G02-170600	2
10	Spark plug 800mm	G20G02-170400	1
10	Spark plug 1050mm	G20G02-170401	1
11	Cooktop burner cup support	G20G02-024200	1
12	Cooktop burner (short)	G24G02-040100	2
13	Left connecting plate	G20C01-022100	1
13	Right connecting plate	G20C01-022200	1
14	Regulator adaptor	G24G02-034200	1
15	Regulator	G20C01-034001	1
16	Cavity thermal baffle	G20G02-074500	1
17	Main gas pipe	G20G02-030700	1
18	Valve 0.76	G20G02-030400	4
19	Oven/Broil valve	G20C02-030618	1
20	Control panel glass wool	G20G02-036000	1
21	Control panel	G20G02-030300-01Z	1
22	Knob #20	G20A20-030101-01	5
*	Complete door component	G20G02-100400Z	1
23	door inner structure	G20G02-100600Z	1
24	door hinge	G20G02-110001	2
25	Fixed plate for glass wool	G20G02-101400	1
27	Glass wool for door	G20G02-103500	1
28	Door outer structure	G20G02-100400-01	1
29	Door handle	G20B11-101900-01	1
30	Broil tray cover	G20G02-215100	1
31	Broil tray	G20G02-215000	1
*	drawer component assembly	G20G02-120100Z	1
32	Drawer plate	G20G02-120500-02Z	1
33	Slideway for tray	G20G02-140600	2
35	slideway for drawer panel left	G20G02-140200	1
35	slideway for drawer panel right	G20G02-150200	1
37	drawer inside plate	G20G02-120200	1
38	glass wool for drawer	G20G02-121000	1
39	drawer outside plate	G20G02-120100-01	1
40	drawer handle	G20G02-120600-01	1
41	door seal	G20C01-071200	1
42	Drawer rail assembly	G20G02-120700	2
43	Front plate barrier strip	G20B01-214500	1
44	Bottom tray (with hole)	G20A01-070700	1
46	Front plate Beam	G20A01-070200	1
47	Front plate	G20C01-070100	1
49	baking rack	G20C01-071900	2
50	Leg installation plate	G20A01-071100	2
51	Foot	G20C01-071500	4
52	Anti-tip bracket	G20A01-212500	1
53	Wire harness	G20G02-180300	1
54	Cavity left plate	G20A01-070400	1
54	Cavity right plate	G20A01-070500	1
55	baffle	G20C01-111100	2
56	Side plate	G20C01-071002-01	2
57	Baffle plate	G20C01-072000	1
58	Weight block	G20A01-210200	1
59	Fixed plate	G20C01-034500	2
60	Ignition	G20C01-170103-02	1
61	Regulator support	G24G02-034500	1
62	Cavity back glass wool	G20C01-072900	1
63	Glass wool	G20A01-070800	1
64	Back plate	G20C01-070303	1
65	Thermocouple probe retaining clip	G20A01-031100	1
66	Cavity top plate	G20C01-070603	1
67	Chimney	G20C01-074100	1
68	Diversion plate	G20C01-075000	1
69	Oven burner aluminum pipe	G20C01-023100	1
70	Power cord	G20A07-160105	1
71	Oven/Broil injector base	G20A01-021100	2
72	Cook top nozzle LPG 0.9	G20A01-021203	4
72	Oven nozzle LPG 1.0	G20A01-021206	1
72	Cook top nozzle NG 1.4	G20A01-021224	4
72	Oven nozzle NG 1.5	G20A01-021227	1